peerless®

Installation and Assembly:
Custom Slotted Hangrods

Model: MIS494

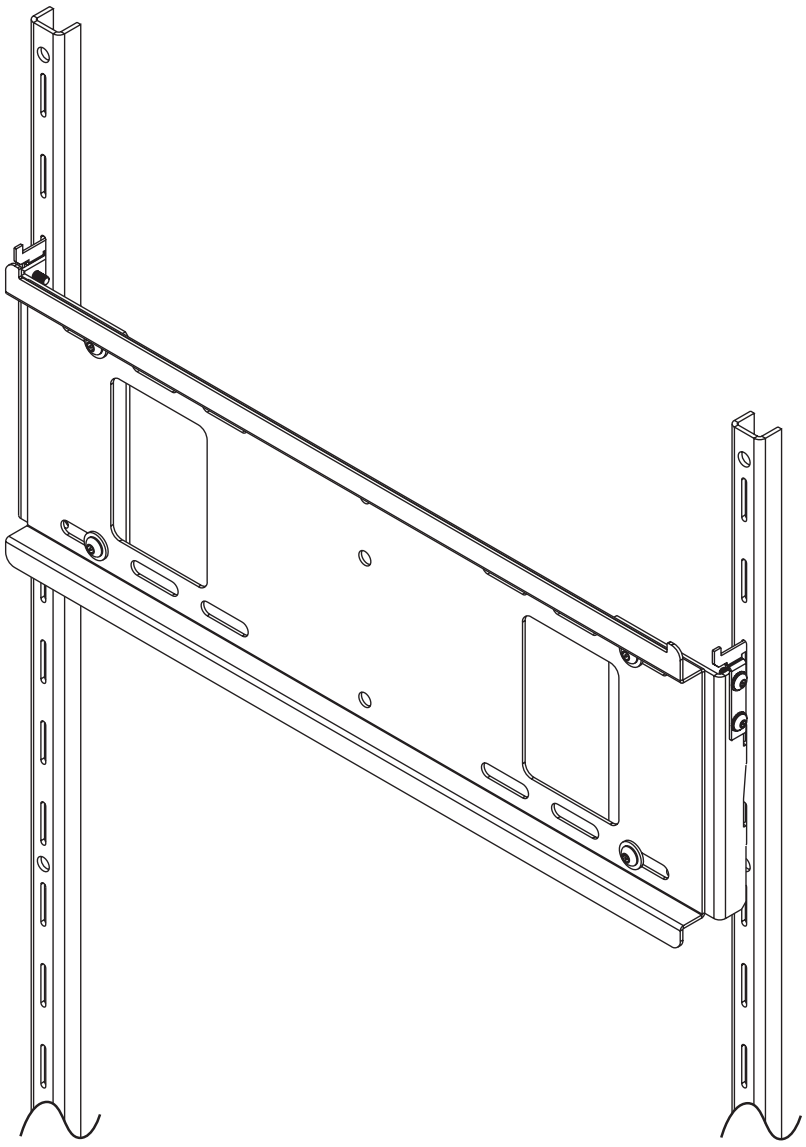

3215 W. North Ave. • Melrose Park, IL 60160 • (800) 865-2112 or (708) 865-8870 • Fax: (708) 865-2941 • www.peerlessmounts.com

ISSUED: 12-10-07 SHEET #: 124-9139-1

Note: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, please call Peerless customer care at 1-800-729-0307.
- This product should only be installed by a qualified professional.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Never exceed the Maximum Load Capacity of 150 lb (68 kg).
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. Use of an "edge to edge" stud finder is highly recommended.
- Do not lift more weight than you can handle. Use additional man power or mechanical lifting equipment to safely handle placement of the screen.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.

Before you start check the parts list to insure all of the parts shown are included.

PARTS LIST

	Description	Qty.	Part #
A	right hook bracket	1	124-1143
B	left hook bracket	1	124-1144
C	lock bracket	2	124-1145
D	1/4-20 x 1/2" socket pin screw	4	520-1054
E	10-32 x 1/2" socket pin serrated washer head screw	4	510-1055
F	1/4" SAE washer	4	540-9440
G	4MM allen wrench	1	560-9646

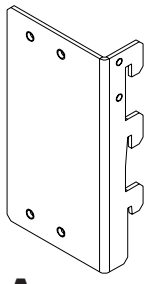











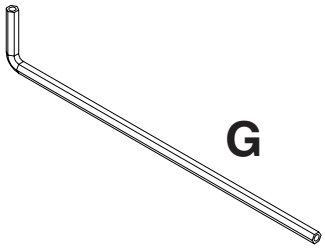

Note: Some parts may not appear exactly as illustrated.

For customer care call (800) 865-2112 or (708) 865-8870.

1 Fasten right hook bracket (**A**) and left hook bracket (**B**) to adapter plate using four 1/4-20 x 1/2" socket pin screws (**D**) and 1/4" SAE washers (**F**). Tighten using 4 mm allen wrench (**G**).

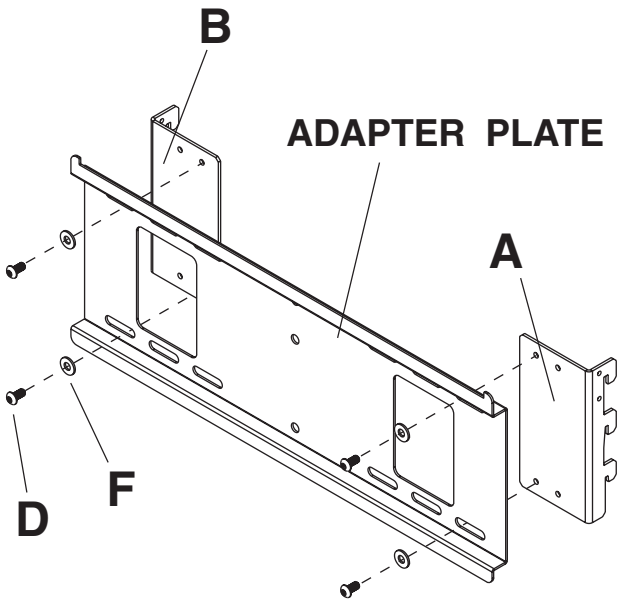

2 Hook adapter plate to slotted rails to desired position.

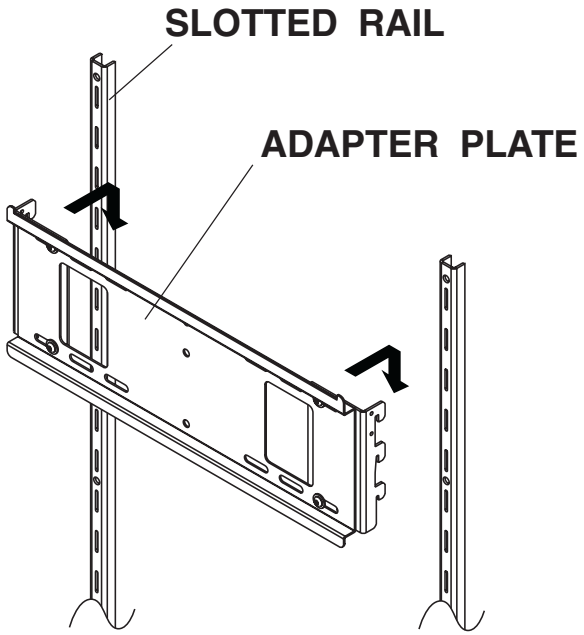

3 Slide lock brackets (**C**) against right hook bracket (**A**) and left hook bracket (**B**) and through opening in slotted rail. Fasten lock brackets (**C**) using four 10-32 x 1/2" socket pin serrated washer head screws (**E**). Tighten using 4 mm allen wrench (**G**).

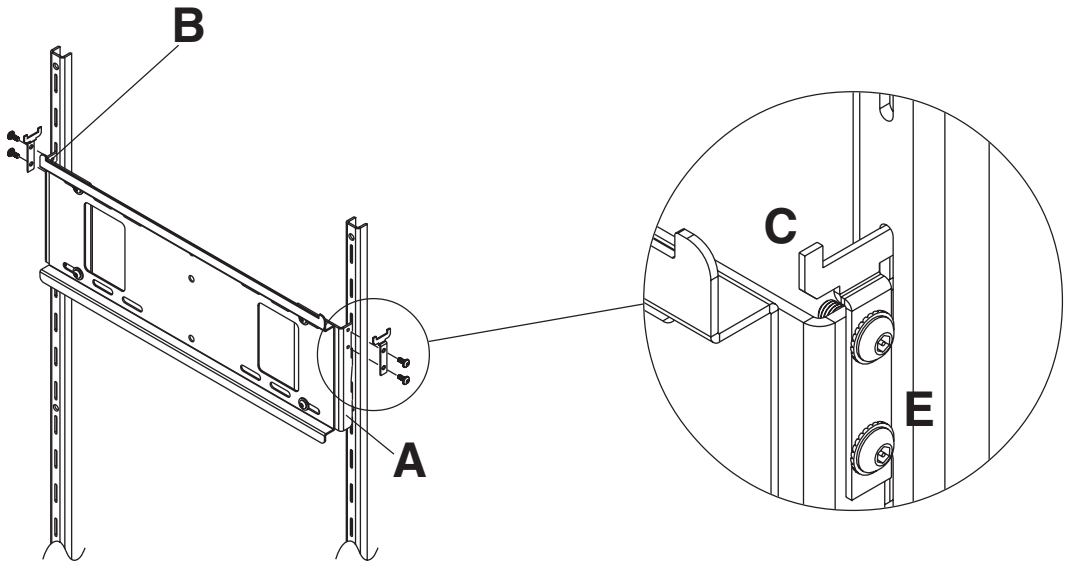

ISSUED: 12-10-07 SHEET #: 124-9139-1

©2007, Peerless Industries, Inc. All rights reserved.
All other brand and product names are trademarks or registered trademarks of their respective owners.

Peerless Industries, Inc.
3215 W. North Ave. Melrose Park, IL 60160
708-865-8870 800-865-2112 Fax 708-865-2941
www.peerlessmounts.com